


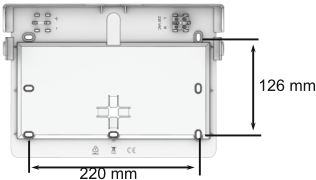


Montage & Service Handleiding Go! Wand


Famostar
emergency lighting


MONTAGE

- 

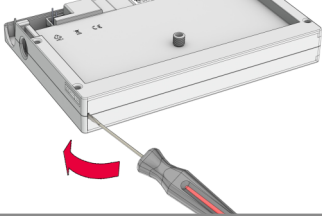1 Bepaal de invoer opening en plaats een tule of wartel.
Monteer de montagebak en sluit de bedrading aan volgens het aansluitschema.
- 



2 Open het serviceluik met een schroevendraaier.
- 

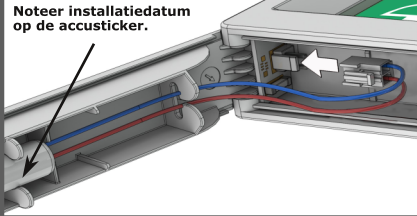3 Schuif het pictogram in de armatuur. **Klik!**
- 

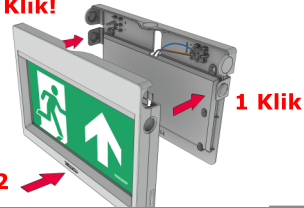4 Sluit de accustekker aan.
Druk met de vinger het accusnoer neerwaarts.
Sluit het serviceluik.
- 

5 **1 Klik!**
2 **1 Klik!**
(1) Druk de lichtunit op de montagebak.
(2) Duw de onderkant hard aan.
Een ratelend geluid kan hoorbaar zijn.

AANSLUITSCHEMA

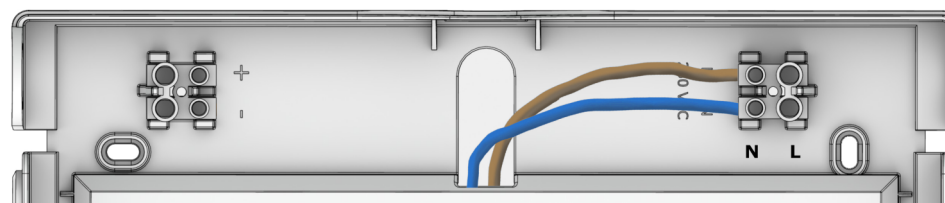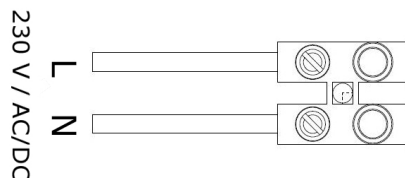

Voor DALI uitvoering:
zie DALI handleiding.


TESTSCHEMA

STATUS INDICATIE:

-  Normaal / Accu wordt opgeladen
-  1 Autonomie niet gehaald
-  2 Accu Storing
-  3 Led aanduiding storing
-  4 Led vluchtweg fout storing
-  5 Elektronica storing


ATS CYCLUS:


Automatisch
Test
Systeem

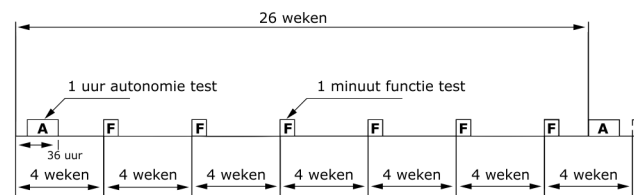


ONDERHOUD

- 

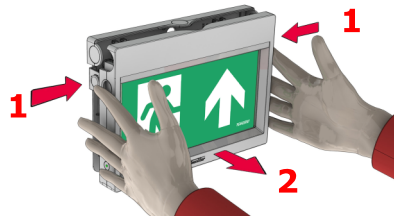1 Reinig de armatuur elk jaar.
Houd het logboek up-to-date na inspectie.
Onderhoud volgens ISSO publicatie 79.
- 

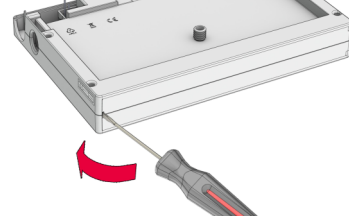2 Neem de lichtunit van de montagebak door de (1) klikvingers aan de zijanten in te drukken (2) en vervolgens de lichtunit van de wand te trekken.
- 

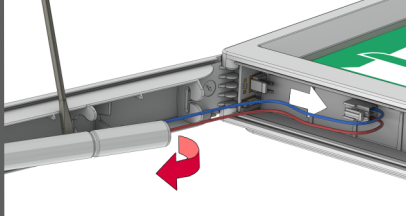3 Open het serviceluik met een schroevendraaier.
- 

4 Vervang de accu elke 8 jaar of als de autonomie-test niet wordt gehaald. Verwijder de accu met een schroevendraaier. Noteer de installatiedatum op de sticker van de nieuw geplaatste accu.



Go! Wand



Go! Wand met
Vluchtwegverlichting

SPECIFICATIES

Type	Spanning	Opgenomen vermogen*	Stroom	Power factor
Go! WPA-1	230V / 50 Hz	2 W / 3.9 VA	17 mA	0.6
Go! WPA-1 C	230V / 50 Hz	2 W / 3.9 VA	17 mA	0.6
Go! WP-230	230V AC/DC	0.6 W / 1.6 VA	7 mA	0.4

*maximale waarden bij ingeschakelde lichtbron en niet volledig geladen accu



Montage en onderhoud dienen uitgevoerd te worden door opgeleid personeel. Montage en/of gebruik in afwijking van de specificaties kan (levens)gevaarlijk zijn door o.a. elektrische schok en/of brand.

Montage	Op normaal ontvlambare oppervlaktes.
Alleen voor vaste aansluiting	Aansluiten met XMVK, YMVK of gelijkwaardig
Temperatuurbereik	+5 °C tot +40 °C
Afmetingen	Zie www.famostar.nl
Autonomie	1 uur
Lichtbron	Led, niet door de klant uitwisselbaar!
ATS	Automatisch Test Systeem (IEC 62034)
Accu	3,6V 1,1 Ah NiMH (AA cel)
Beschermingsklasse	IP40
Keurmerk	ENEC Kema-Keur (IEC 60598-2-22)
Isolatieklasse	Klasse II, toestellen hoeven niet geaard te worden.
Materiaal	Polycarbonaat (PC)

Garantie, toebehoren, afstandstabellen en verdere informatie zie www.famostar.nl.





Mounting & Service Manual Go! Wall

Famostar
emergency lighting

MOUNTING

- Determine cable input opening. Place a grommet or cable gland. Mount the mounting plate. Connect the wires according to the wiring diagram.
- Position a screwdriver in the slot and subvert it to open the service hatch.
- Insert the pictogram as shown in the picture above. **Click!**
- Write installation date on the battery label. Put the battery connector in position. Push the battery wires downwards. Close the service hatch.
- 1 Click!**
2 **1 Click!**
(1) Mount the lightunit on the base plate.
(2) Push the lower frontside firmly. A 'clicking' sound can be audible.

WIRINGDIAGRAM

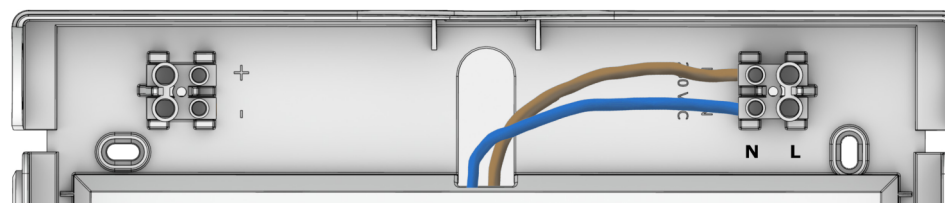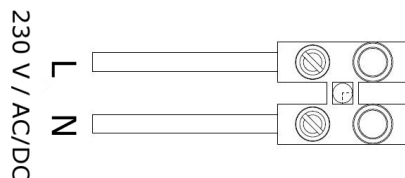

For DALI version:
see DALI manual.


TESTING

STATUS INDICATION:

- Normal / Battery is being charged
- (1) Required autonomy not achieved
- (2) Battery failure
- (3) Led signage failure
- (4) Led escape route failure
- (5) Elektronik failure


ATS CYCLE:

Automatic
Test
System

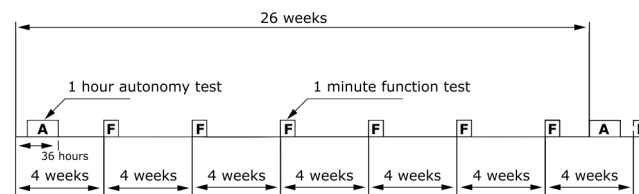

SERVICE

- Clean the luminary every year. Keep the logbook up-to-date after inspection. Maintenance according ISSO publication 79.
- Remove the lightunit from the base plate by: (1) pushing both clickers on the side, (2) pulling the lightunit away from the wall.
- Position a screwdriver in the slot and subvert it to open the service hatch.
- Change the battery every 8 years or if required autonomy isn't achieved. Remove the battery with a screwdriver. Write the installation date on the battery label of the new installed battery.

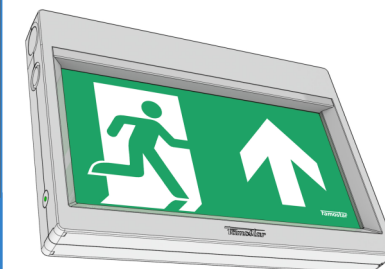

Go! Wall



Go! Wall with
Escape route lighting

SPECIFICATION

Type	Voltage	Power consumption*	Current	Power factor
Go! WPA-1	230V / 50 Hz	2 W / 3.9 VA	17 mA	0.6
Go! WPA-1 C	230V / 50 Hz	2 W / 3.9 VA	17 mA	0.6
Go! WP-230	230V AC/DC	0.6 W / 1.6 VA	7 mA	0.4

*maximum values at switched-on light source and not fully charged battery



Installation and maintenance to be carried out by qualified personnel only. Installation and/or use in deviation from the specifications can be dangerous or life-threatening due to electrical shock and/or fire.

Mounting	Installation on normal flammable surfaces.
Only for fixed mounting	Use XMKV, YMKV or equivalent
Temperature range	+5 °C till +40 °C
Dimensions	See www.famostar.nl
Autonomy	1 hour
Light source	LED, non user-replaceable!
ATS	Automatic Test System (IEC 62034)
Battery	3.6V 1.1 Ah NiMH (AA cell)
Protection rate	IP40
Marking	ENEC Kema-Keur (IEC 60598-2-22)
Insulation class	Class II, double insulated (no ground connection needed).
Material	Polycarbonate (PC)

Warranty, accessories and spacing tables and further information see www.famostar.nl.